

## **MAX DRIVE™ - USER GUIDE for Xbox™**

**Page 1.** Introduction

**Page 2.** Getting started

**Page 3.** Copying files from a PC to MAX Drive™

**Page 4.** Downloading new Xbox™ game saves

**Page 5.** Uploading and sharing your own Xbox™ saves

**Page 6.** Technical support

### **1. Welcome to the exciting world of MAX Drive™!**

MAX Drive™ is the revolutionary new USB memory card that lets you transfer game saves between your Xbox™ and your PC's hard drive. MAX Drive™ is ideal for backing up your Xbox™ saves to free up more memory card space, and for exchanging game-busting Xbox™ saves via the web or email.

The included MAX Drive™ PC software provides all the memory card management features you need such as copying and moving files between your Xbox™ and a PC.

You now have access to a world of expanded capabilities for downloading and exchanging game-busting Xbox™ saves using any internet-enabled PC. Download the latest game saves, team rosters and more, then transfer them straight to your Xbox™. You can even upload your own game saves to the internet, or email them to your friends, all from MAX Drive's™ easy-to-use PC interface.

### **2. Getting Started**

On Xbox™: To plug MAX Drive™ into your Xbox™ controller's port, use the supplied X-Adaptor. MAX Drive™ will now function like a regular Xbox™ memory card.

On PC: First of all, install the PC software that came with your MAX Drive™ by double clicking on the application file called "Setup". Simply follow the on-screen prompts.

When using MAX Drive™ with Windows XP™ for the first time, we recommend that you insert the MAX Drive™ hardware before running the software. With other operating systems you may need to install a software driver, which is included on the disc.

Once your MAX Drive™ PC software is installed and running, it will automatically see your MAX Drive™ hardware when you insert it into a USB port on your PC. Although your PC will recognise MAX Drive™ as a USB device, Windows™ will NOT see MAX Drive™ as an extra device within "My Computer" ∅ therefore you can only use the MAX Drive™ software to move Xbox™ files to and from your hard drive.

Important: Don't attempt to re-format the MAX Drive™ from within Windows™.

This will cause it to no longer support the Xbox™ file structure.

### **3. Copying files from a PC to MAX Drive™**

It's easy to copy game saves between your MAX Drive™ memory card and any PC, and a free USB port (1.1 or 2.0).

Make sure you have installed the PC software that came with your MAX Drive™. Run the MAX Drive™ software and then insert your MAX Drive™ memory card into a free USB port on your PC.

You will see two windows; "MAX DRIVE" on the left and "PC DATABASE" on the right. In the left window you'll see any game saves that are stored on your MAX Drive™ memory card. If this is the first time you've used MAX Drive™, this window will be empty.

In the right window you'll see a list of all the saves that are stored on your PC's hard drive (in the "Saves" folder).

Click on the "+" symbol in the "PC DATABASE" window to explore all the saves associated with an individual game. Clicking on "-" collapses the directory.

Double click on the name of an individual game save to display a description entered by its creator (eg "everything unlocked"), the size of the file, the date it was created, and more. You can edit the game save name and description here if you wish.

Click "OK" when you're done.

If you right-click your mouse when the cursor is over a game title, the "Refresh" command becomes available. Clicking on this will update the list of saves on your screen, adding any new saves since you last checked. This action can also be performed in the MAX DRIVE window.

Now try dragging and dropping files between your MAX Drive™ memory card and your PC database using your mouse. You can even rename game save names by right-clicking on them with your mouse and selecting "Rename" (Note: You can't change the name of a game).

In either window you can also delete saves from your MAX Drive™ memory card by right clicking on them, then selecting "Delete File".

#### **4. Downloading new Xbox™ game saves**

MAX Drive™ opens the door to a world of online content. You can download "Community" saves which have been created and uploaded by other MAX Drive™ users like you, or official Action Replay™ "Powersaves" & 100% unofficial game-busting cheats created by Datel.

Action Replay™ is the world's best-selling cheat system and game save manager for Xbox™, developed by Datel (available separately). MAX Drive™ is 100% compatible with all the Action Replay™ saves you'll find at [www.codejunkies.com](http://www.codejunkies.com), the official Datel web site.

To download new game saves, run your MAX Drive™ software and click on the "CODEJUNKIES" button at the top of the screen to visit the web site. Or simply enter the URL in any internet browser, for example Microsoft Internet Explorer™.

On the title screen of Codejunkies.com make sure you select the correct region (US/Canada or Europe) & if you download game saves intended for a different region then they won't work with your game.

From the front page of Codejunkies.com, select the "Saves" button at the top of the screen and then on the next screen click on "Saves for Xbox". You'll see a list of the latest Xbox™ games for which saves have been created. You can also choose to view games alphabetically by clicking on a letter.

Click on an Xbox™ game name and you'll be taken to a new game showing all the saves currently available for that game. Most game saves will have a description, for example "100% complete". Once you've found a save you'd like, click on the "Download" button underneath that save.

You can download your Xbox™ saves to any location on your PC. We recommend that you create a new folder in your root directory called "Xbox saves". This will help you find your saves easily.

Top Tip: DO NOT download or move any Xbox™ saves directly to the "Saves" folder within the MAX Drive™ software. This is reserved for use exclusively by MAX Drive™.

Now run the MAX Drive™ software and simply drag the new save from its location on your PC and drop it anywhere onto the "PC Database" window of your MAX Drive™ software. MAX Drive™ will immediately update its PC Database window to display your new save. It's that easy!

Note: You can only copy one save at a time. The MAX Drive™ software will inform you if the save already exists in its PC database.

To copy an Xbox™ game save from your PC to your MAX Drive™ memory card, simply drag it from the PC DATABASE window to the MAX DRIVE window using your mouse.

Codejunkies.com is the best place to find Xbox™ game saves for your MAX Drive™, but you can download saves to your PC from anywhere Ð CDR, DVD-ROM, floppy disc, email, fan web site, FTP, etc Ð and drag them to your PC Database window.

On the title screen of Codejunkies.com make sure you select the correct region (US/Canada or Europe) Ð if you download game saves intended for a different region then they won't work with your game.

From the front page of Codejunkies.com, select the "Saves" button at the top of the screen and then on the next screen click on "Saves for Xbox". You'll see a list of the latest Xbox™ games for which saves have been created. You can also choose to view games alphabetically by clicking on a letter.

Click on an Xbox™ game name and you'll be taken to a new game showing all the saves currently available for that game. Most game saves will have a description, for example "100% complete". Once you've found a save you'd like, click on the "Download" button underneath that save.

You can download your Xbox™ saves to any location on your PC. We recommend that you create a new folder in your root directory called "Xbox saves". This will help you find your saves easily.

Top Tip: DO NOT download or move any Xbox™ saves directly to the "Saves" folder within the MAX Drive™ software. This is reserved for use exclusively by MAX Drive™.

Now run the MAX Drive™ software and simply drag the new save from its location on your PC and drop it anywhere onto the "PC Database" window of your MAX Drive™ software. MAX Drive™ will immediately update its PC Database window to display your new save. It's that easy!

Note: You can only copy one save at a time. The MAX Drive™ software will inform you if the save already exists in its PC database.

To copy an Xbox™ game save from your PC to your MAX Drive™ memory card, simply drag it from the PC DATABASE window to the MAX DRIVE window using your mouse.

Codejunkies.com is the best place to find Xbox™ game saves for your MAX Drive™, but you can download saves to your PC from anywhere CDR, DVD-

ROM, floppy disc, email, fan web site, FTP, etc and drag them to your PC Database window.

## **5. Uploading and sharing your own Xbox™ saves**

Want to prove you're the world's best game save creator? Half the fun of the MAX Drive™ online community is sharing your own content with the world. Whether you want to create your own MAX Drive™ web site to showcase your best Xbox™ saves, or exchange game saves via email or CDR, MAX Drive™ makes it all possible.

- i) First of all, copy a new game save from your Xbox™ to your MAX Drive™ memory card.
- ii) Run the MAX Drive™ PC software, then insert your MAX Drive™ memory card in a free USB port on the PC.
- iii) Drag the Xbox™ game save from the "MAX DRIVE" window to the "PC DATABASE" window. The save will now appear in the PC Database window.
- iv) Locate the game save you want in your MAX Drive™ PC Database window.  
Drag the game save out of the PC Database and onto your Windows™ desktop or other destination. The file will be copied to the location of your choice.

## **6. Technical support**

If you are experiencing difficulties with your MAX Drive™, please ensure that you have read and understood the contents of this user manual before contacting Datel's Customer Service department.

Datel will be unable to provide assistance with configuring Internet access settings for specific Internet Service Providers (ISP's). For specific advice relating to your Internet access settings you should contact your ISP.

Customers in the United Kingdom

Telephone: 0906 550 1236\*

\*Calls to this line are charged at £1 per minute at all times. Lines are open 8am - 7pm Monday to Friday, 9am - 3pm Saturday, excluding national and bank holidays. You must be aged 18 or over and have the permission of the person who pays your telephone bill. This service is available to UK residents only.

© 2004 Datel Design & Development Ltd.  
MAX Drive and Action Replay are trademarks of Datel Design & Development Ltd.

Xbox is a registered trademark of Microsoft Corporation.

MAX Drive is a 100% unofficial product and is NOT sponsored, endorsed or approved by Microsoft Corporation, nor any games developer or publisher.